


HT07H Touch Screen Heating Thermostat with Weekly Programmable

General

- HT07H Touch Screen Heating Thermostat with weekly programming adopts the latest MCU technology.
- The application is heating equipment: Water heating system or electric heating or actuator control.
- Digital display of sensing temperature and user selected temperature setting on demand, easy for use.
- The clock continues when power fail and it won't affect the period of time settings.
- It has the high reliability and powerful anti-jamming.
- Setting daily 4 periods of time and the setting temperature.
- Kinds of periods of time modes. 5+2 / 6+1 / 7days
- The selection for manual control or automatic periods of time control.
- Mini size junction box and suitable for the entire world.
- Flame retardant and safe and easy-cleaning.
- Large LCD display with green or blue or white backlight
- keypad lock function to prevent the misuse children
- Extra sensor: 3 meters (Optional)

Operation Guide

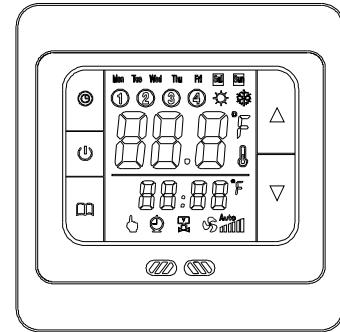

- Press **P** you can turn on or turn off the power.
- Press **▲** or **▼** to adjust the setting temperature value and other setting item.
- Keep pressing **C** for 5 seconds, it will enter into the current time adjustment.
① Choose the week / hour / minute to be modified, press **▲** or **▼** to modify the current item, after set minute if you press **C** then exit the clock setting.
- Press **W** you can choose the user manual mode **1** or automatic mode **2**.
- Keep pressing the key **T** for 5 seconds, it will enter into the period of time setting mode. Press **T** to choose the one need to be modified; it will start the time and setting temperature. Press **▲** or **▼** to modify the value.
- Set the temperature and turns the clock display, temperature measurement read directly.
- At the same time key **C** **T** for 2 seconds, the controller keypad is locked. LCD will show ---, in the locked status, press the key **C** **T** for 2 seconds, keypad will be unlock. LCD will show temperature value.


Advance function setting

- How into advance function setting: switch off the thermostat use Press **P**, Display will show "OFF". press **P** thermostat will turn on. It will show "byc", Press Key **T**, it will into the advanced function setting.
- The screen will show Adj and into temperature calibration program, Setting rang:-5.0->+5.0°C adjust **▲** or **▼** to modify, after 1 SEC. the display will show temperature value with modified. Default setting value: -2.5°C
- Press the key **T** to select the period-time mode: The main display shows **Pr** the week area will be Mon Tue Wed Thu Fri **Sat** **Sun** the number will gleam when the same setting. You can use **▲** or **▼** to choose the mode 5+2 / 6+1 / 7days
- Press the key **T** into Antifreeze feature set: LtP, You can use **▲** or **▼** to choose: ON: Enable OFF: Disable
- Press the key **T** to select Sensor or temperature control mode, You can use **▲** or **▼** to choose: IN (internal control, room sensor) / OUT (external control, floor sensor) / ALL (double temperature double control, the internal room temperature sensor, external sensor overheating protecting, default setting value: IN)
- Press the key **T** to Set the value of external temperature sensor limit, display: ToP (setting range: 40 to 80 °C)
- Press the key **T** to Set the value of internal sensor hysteresis, display: dt0 (setting rang:0.5 to 4°C) (default setting:1°C)
- Press the key **T** to Set the value of External sensor hysteresis, display: dt1(setting rang:0.5 to 5°C) (default setting:3°C)
- Press the key **T** to Set the value of backlitting status, display: bL(on: always display off: auto switch off after 5 sec. default setting: off)
- Press the key **T** to set the system run status at re-power, display: Sat(on: the same as previous status, off: off status at every time, default setting: off)
- Press the key **T** to Restore factory settings, display :deF, after finished, it will back to normal working status automatic

Technical parameters

- Power Supply: 230VAC ±10% 50/60 Hz (24VAC Optional)
- The maximum switch power is 3600W.
- Internal sensor setting range: 5 - 35°C (programmable) (factory setting: 25°C)
- Internal sensor measurement range: 0 - 40°C
- External sensor measurement range: 0 - 90°C (factory setting: 50°C)
- Display Type: touch LCD screen, display area size: 60 x 45 mm
- Inside Sensor: NTC B=3380 10k @25degrees Celsius
- Extra Sensor: Length=3M NTC B=3380 10k @25degrees Celsius(Optional)
- Setting Unit: 0.5°C / step
- Indication Accuracy: 0.1°C
- Weight: 180 g/piece

Dimensions:

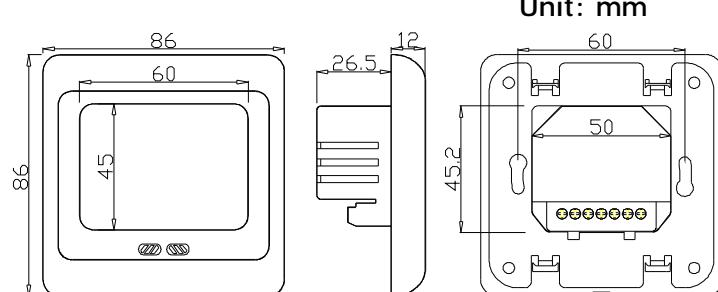

Setup guide:

